

# i3PROJECTOR

## USER MANUAL



# Table of Contents

<b>Table of Contents</b>	<b>1</b>
<b>Usage Notice</b>	<b>3</b>
Precautions .....	3
Regulation & Safety Notices .....	5
<b>Introduction</b>	<b>7</b>
Package Overview .....	7
Product Overview .....	8
Main Unit .....	8
Control Panel .....	9
Connection Ports .....	10
Remote Control .....	11
<b>Installation</b>	<b>12</b>
Connecting to Computer/Notebook .....	12
Connecting to Video Sources .....	13
Powering On/Off the Projector .....	14
Powering On the Projector .....	14
Powering Off the Projector .....	15
LED Indicator Messages .....	15
Adjusting the Projected Image .....	16
Adjusting the Projector's Height .....	16
Adjusting the Projector's Focus .....	17
Adjusting Projection Image Size .....	17
<b>User Controls</b>	<b>18</b>
Using the Control Panel .....	18
Using the Remote Control .....	19
Remote Control Battery Installation .....	19
On-screen Display Menus .....	21
How to operate .....	21
Structure .....	22
Picture .....	24
Screen .....	26
Setting .....	28
Setting   Security .....	30

Volume .....	32
Options .....	33
Options   Lamp Settings .....	35
3D .....	36
Interactive .....	37
<b>Appendices</b> .....	<b>38</b>
Troubleshooting .....	38
Image Problems .....	38
Projector Problems .....	41
Remote Control Problems .....	41
Sound Problems .....	41
3D Problems .....	41
On Screen Messages .....	42
Compatibility Modes .....	43
Replacing the lamp .....	47
Replacing and cleaning the optional dust filter .....	48
Ceiling Mount Installation .....	49
Specifications .....	50

# Usage Notice

## Precautions



*Please follow all warnings, precautions and maintenance as recommended in this user's guide.*

- ■ Warning- Do not look into the projector's lens when the lamp is on. The bright light may hurt and damage your eyes.
- ■ Warning- To avoid the risk of fire or electric shock, do not expose this projector to rain or moisture.
- ■ Warning- Please do not open or disassemble the projector as this may cause electric shock.
- ■ Warning- When replacing the lamp, please allow the unit to cool down. Follow instructions as described on pages 53.
- ■ Warning- This projector will detect the life of the lamp itself. Please be sure to change the lamp when it shows warning messages.
- ■ Warning- When the lamp is approaching the end of its lifetime, the message "Lamp Warning: Lamp life exceeded." will show on the screen. Please contact your local reseller or service center to change the lamp as soon as possible.
- ■ Warning- Reset the "Clear Lamp Hours" function from the on-screen display "Options | Lamp Settings" menu after replacing the lamp module (refer to page 34).
- ■ Warning- When switching the projector off, please ensure the cooling cycle has been completed before disconnecting power. Allow 90 seconds for the projector to cool down.
- ■ Warning- Do not block the light path between the light source and the lens with any objects. Doing so could cause the object to catch on fire.

**Do:**

- ☐ Turn off and unplug the power plug from the AC outlet before cleaning the product.
- ☐ Use a soft dry cloth with mild detergent to clean the display housing.
- ☐ Disconnect the power plug from AC outlet if the product is not being used for a long period of time.

**Do not:**

- ☐ Clean the lens.

- *When the PJ-lens is dirty, please contact the service center. Do not own wipe to avoid scratching the lens.*

- ☐ Block the slots and openings on the unit provided for ventilation.
- ☐ Use abrasive cleaners, waxes or solvents to clean the unit.
- ☐ Use under the following conditions:
  - In extremely hot, cold or humid environments.
    - ☐ Ensure that the ambient room temperature is within 5 - 40°C.
    - ☐ Relative Humidity is 5 - 40°C, 80% (Max.), non-condensing.
  - In areas susceptible to excessive dust and dirt.
  - Near any appliance generating a strong magnetic field.
  - In direct sunlight.

# Regulation & Safety Notices

*This appendix lists the general notices of your projector.*

## ***FCC notice***

This device has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the device and receiver.
- Connect the device into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

## ***Notice: Shielded cables***

All connections to other computing devices must be made using shielded cables to maintain compliance with FCC regulations.

## ***Caution***

Changes or modifications not expressly approved by the manufacturer could void the user's authority, which is granted by the Federal Communications Commission, to operate this projector.

## ***Operation conditions***

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference and
2. This device must accept any interference received, including interference that may cause undesired operation.

## ***Notice: Canadian users***

This Class B digital apparatus complies with Canadian ICES-003.

## ***Remarque à l'intention des utilisateurs canadiens***

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

## ***Declaration of Conformity for EU countries***

- EMC Directive 2004/108/EC (including amendments)
- Low Voltage Directive 2006/95/EC
- R & TTE Directive 1999/5/EC (if product has RF function)

## **Disposal instructions**



**Do not throw this electronic device into the trash when discarding. To minimize pollution and ensure utmost protection of the global environment, please recycle it.**

 
# Introduction

## Package Overview

*Unpack and inspect the box contents to ensure all parts listed below are in the box. If something is missing, please contact our customer service.*




Projector




Remote Control



Battery

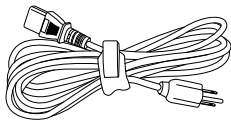

AC Power Cord

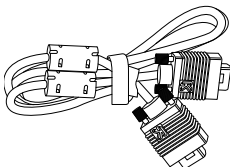

VGA Cable

### Documentation:

- User's Guide (CD)




■ Due to different applications in each Country, some regions may have different accessories.



# Product Overview


## Main Unit

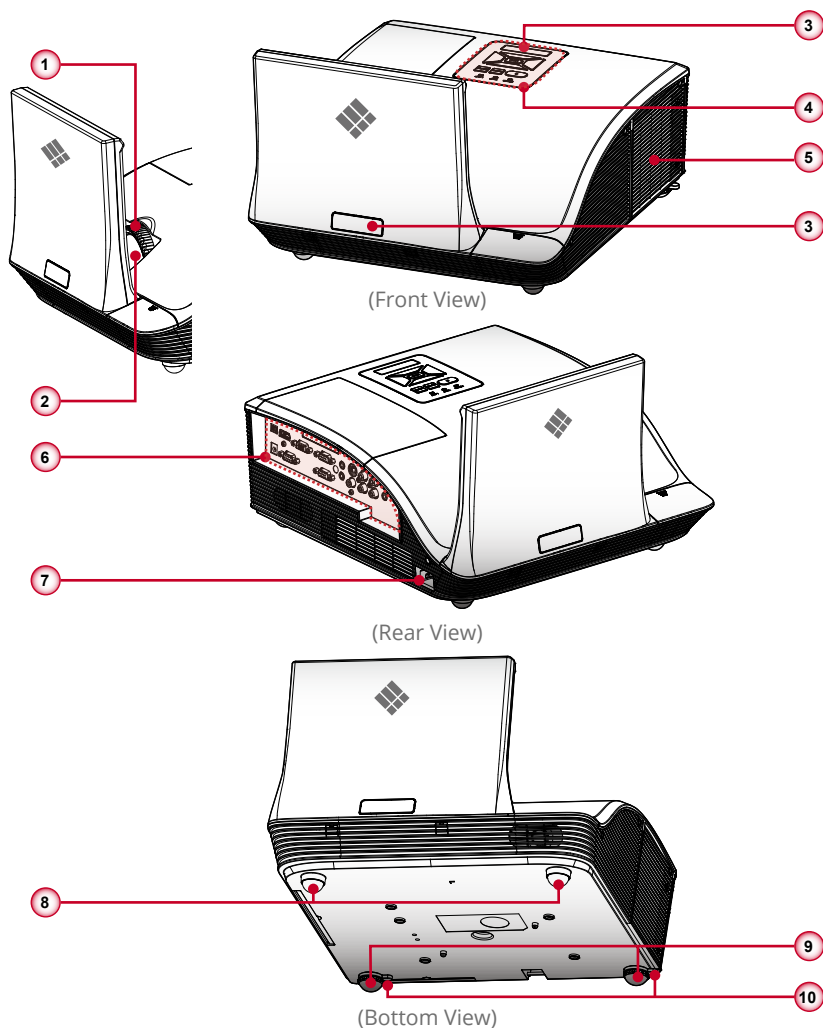


1. Focus Ring
2. Lens
3. IR Receiver
4. Control Panel
5. Lamp Cover


6. Input / Output Connection Ports
7. Power Socket
8. Elevator Feet
9. Elevator Feet
10. Elevator Feet Spacer

# Control Panel

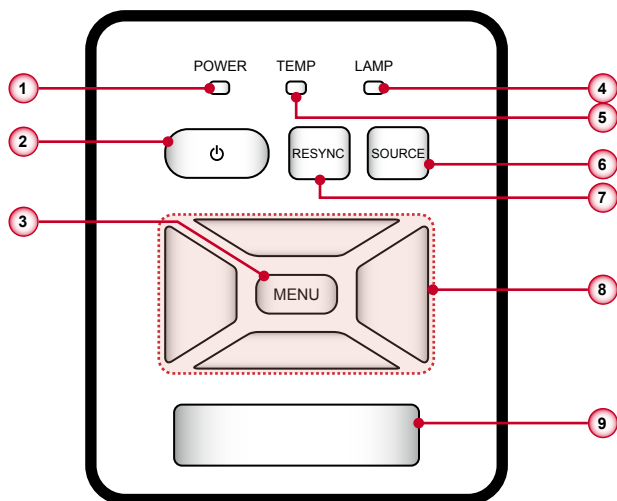


1. Power LED
2. Power 
3. Menu / Exit
4. Lamp LED
5. Temp (Temperature) LED
6. Source
7. Resync
8. Four Directional Select Keys
9. IR Receiver

## Connection Ports

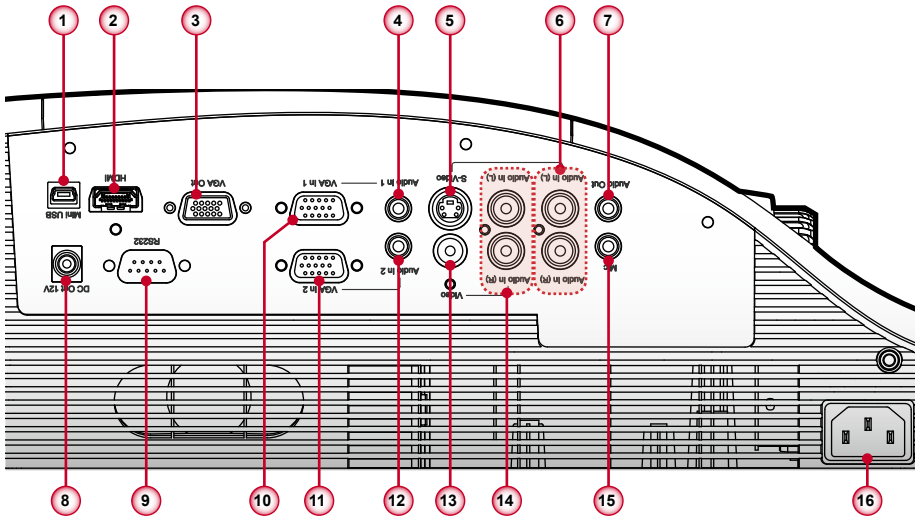

1. Mini USB Connector
2. HDMI Connector
3. VGA Output Connector
4. Audio In 1 Connector (For VGA In 1 Connector)
5. S-Video Connector
6. Left/Right RCA Audio Input Connector (For S-Video Connector)
7. Audio Output Connector
8. 12V Trigger Relay Connector (12V, 250mA)
9. RS232 Connector
10. VGA In 1 Connector
11. VGA In 2 Connector
12. Audio In 2 Connector (For VGA In 2 Connector)
13. Composite Video Input Connector
14. Left/Right RCA Audio Input Connector (For Composite Video Input Connector)
15. 3.5mm Microphone Input Connector
16. Power Socket


# Remote Control

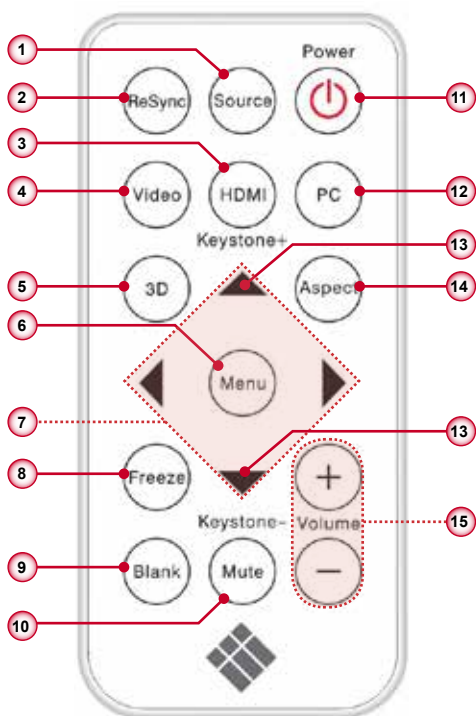

1. Source
2. ReSync
3. HDMI
4. Video
5. 3D
6. Menu
7. Four Directional Select Keys
8. Freeze
9. Blank
10. Mute
11. Power
12. PC
13. Keystone /
14. Aspect
15. Volume +/-




**Note** ■ Before using the remote control for the first time, remove the transparent insulation tape. See page 18 for battery installation.

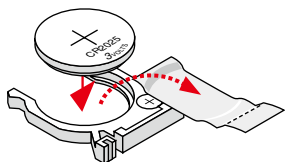

# Installation

## Connecting to Computer/Notebook

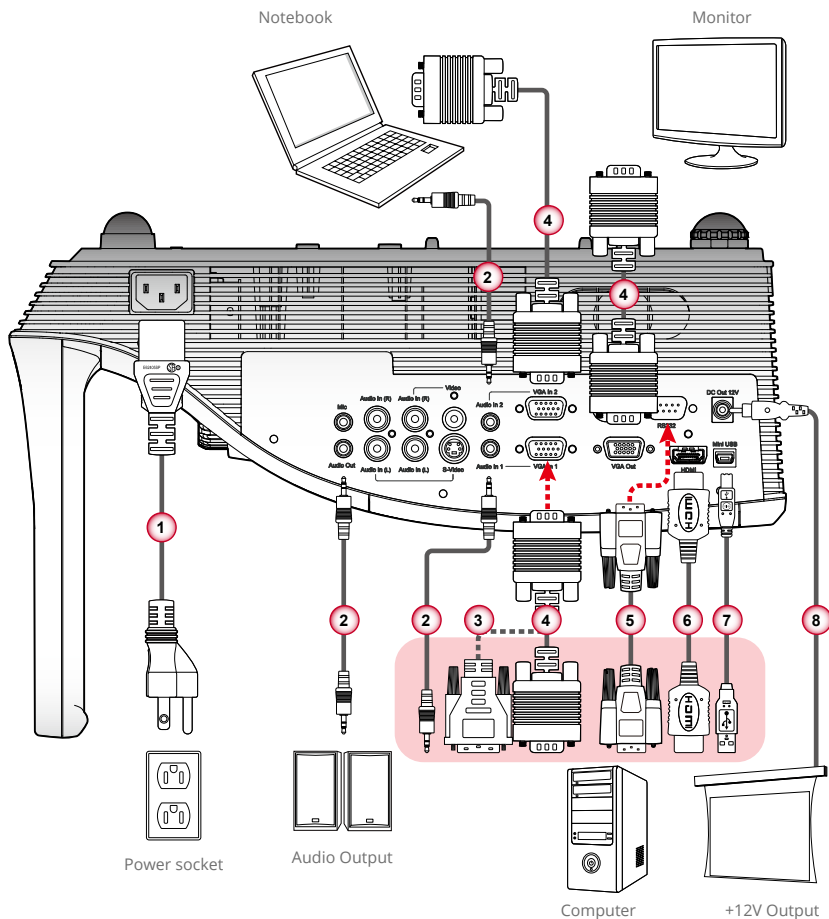


1. Power Cord
2. Audio Cable \*
3. VGA to DVI-A Cable \*
4. VGA Cable
5. RS232 Cable \*
6. HDMI Cable \*
7. USB Cable \*
8. 12V DC Jack \*



Due to the difference in applications for each country, some regions may have different accessories.  
\* Optional accessory

# Connecting to Video Sources

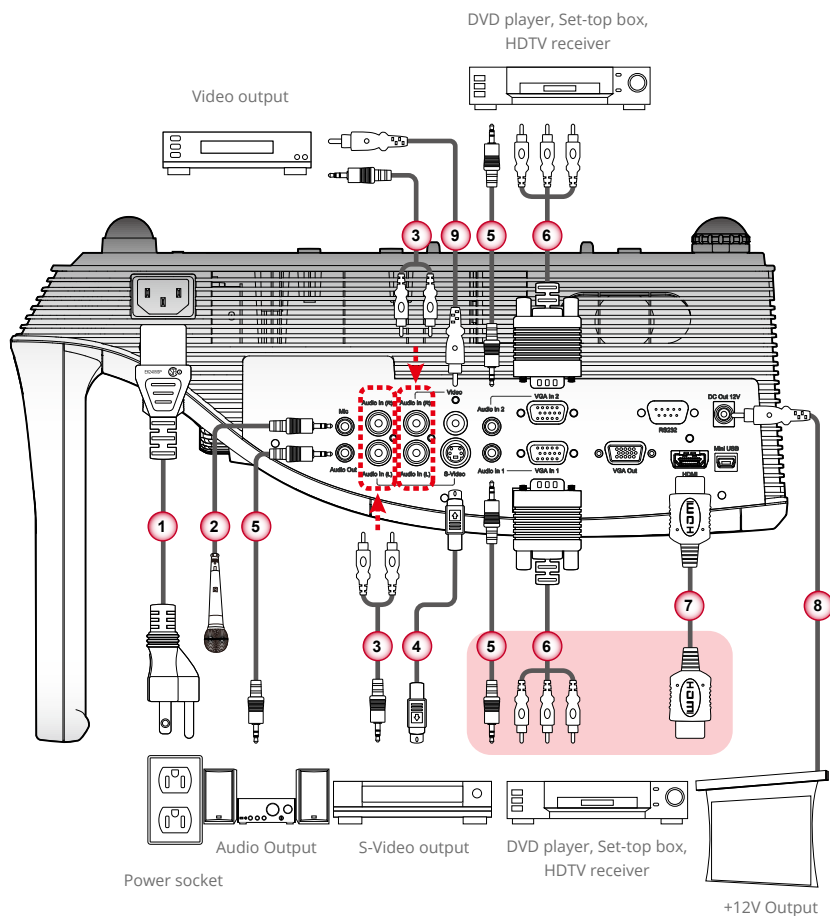

1. Power Cord
2. Microphone Cable \*
3. Audio Cable Jack/RCA \*
4. S-Video Cable \*
5. Audio Cable \*
6. VGA to HDTV (RCA) Cable \*
7. HDMI Cable \*
8. 12V DC Jack \*
9. Composite Video Cable \*





■ Due to the difference in applications for each country, some regions may have different accessories.  
 ■ \* Optional accessory

# Powering On/Off the Projector

## Powering On the Projector

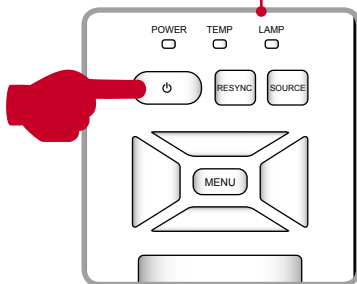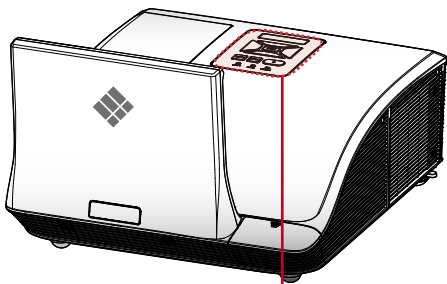

1. Securely connect the power cord and signal cable. When connected, the Power LED will turn red.
2. Turn on the lamp by pressing “⏻” button on the control panel or on the remote control. The Power LED will turn blue.
3. Turn on your source that you want to display on the screen (computer, notebook, video player, etc). The projector will detect the source automatically and will display on the screen.
4. If you connected multiple sources at the same time, press the “Source” button on the remote control to switch between inputs.




OR



## Powering Off the Projector

1. Press the “” button on the control panel or on the remote control to turn off the projector. The following message will be displayed on the screen. Press the “” button again to confirm.

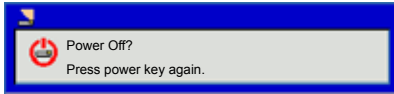

2. The Power LED will turn red and blink rapidly after the projector is turned off. And the fans will continue to operate for about 90 seconds to ensure that the system cools properly.
3. Once the system has finished cooling, the Power LED will stop blinking and turn solid red to indicate standby mode.
4. It is now safe to unplug the power cord.

## LED Indicator Messages

Message	Lamp LED (Red)	Temp LED (Red)	Power LED (Red)	Power LED (Blue)
Power Plug	Flash ON to OFF 100ms	Flash ON to OFF 100ms	Flash ON to OFF 100ms	-
Standby	-	-	ON	-
Power button ON	-	-	-	ON
Cooling state	-	-	0.5 second H(ON), 0.5 second L(OFF) flashing	-
Power button OFF; Cooling completed; Standby Mode	-	-	ON	-
Firmware download	ON	ON	ON	-
Thermal sensor error, OSD showing as below: 1. Make sure air in and outlets are not blocked. 2. Make sure the environment temperature is under 40 degree C.	-	ON	-	ON
Fan lock error, OSD showing as below: The projector will switch off automatically.	-	0.5 second H(On), 0.5 second L(Off) flashing	-	ON
Lamp error (Lamp, Lamp driver, Color wheel)	ON	-	-	ON



# Adjusting the Projected Image

## Adjusting the Projector's Height




*The projector is equipped with elevator feet for adjusting the image height.*

- To raise the image:

Use screw in feet to raise the image to the desired height angle and fine-tune the display angle. 1


- To lower the image:

Use screw in feet to lower the image to the desired height angle and fine-tune the display angle. 2

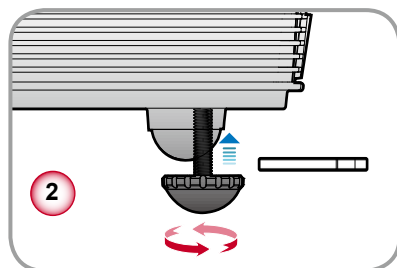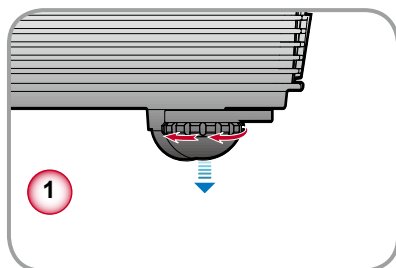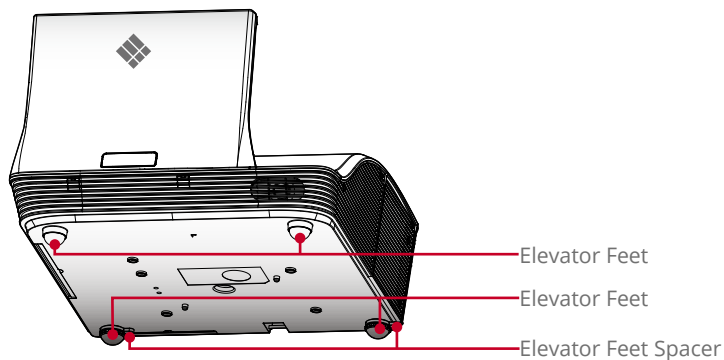

# Adjusting the Projector's Focus


To focus the image, rotate the focus ring until the image is clear.

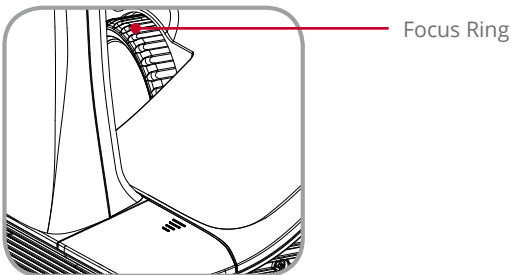


# Adjusting Projection Image Size

Refer to the graphics and table show as below to determine the screen size and projection distance.

- Adjusting the vertical image position

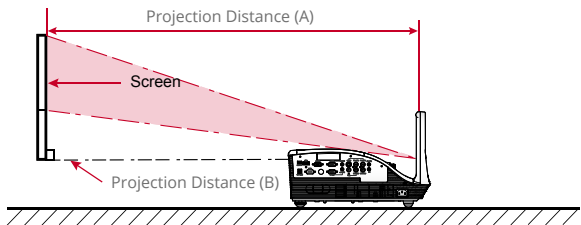


WXGA Series					
Screen Size (16:10)		Projection Distance (A)		Projection Distance (B)	
Diagonal (inch)	mm	Inch	mm	Inch	mm
70	1778	20.4	517	7.2	182
80	2032	23.5	596	10.3	262
87.2	2215	25.8	655	12.6	320
90	2286	26.7	677	13.5	343
100	2540	29.9	759	16.7	424



- *Projection Distance A(mm)=Screen size(mm) x 0.296, Tolerance is around 3.1%  
Ex: Projection Distance (655mm)=Screen size(2215mm) x 0.296*
- *This table is for user's reference only.*


# User Controls

## Using the Control Panel

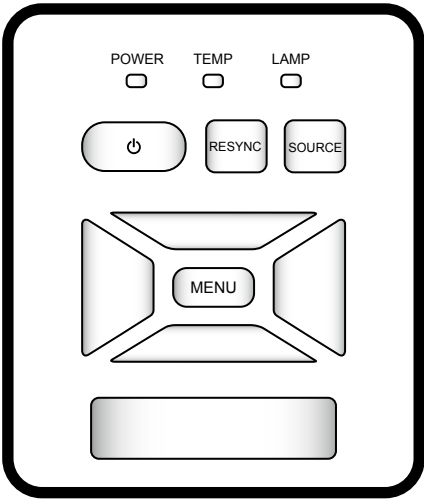



Name	Description
Power	Turn the projector on/off.
Power LED	Indicate the projector's status.
Menu / Exit	Launch the on-screen display (OSD) / Exit a menu.
ReSync	Automatically synchronize the PC analog timing to its optimized condition.
Source	Select an input signal.
Four Directional Select Keys	Use     to select items or make adjustments to your selection.
Lamp LED	Indicate the projector's lamp status.
Temp LED	Indicate the projector's temperature status.

# Using the Remote Control

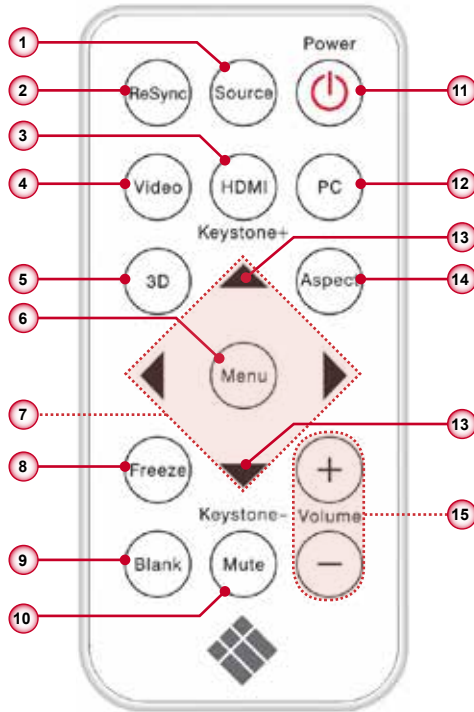


## Remote Control Battery Installation

1. Press firmly and slide the battery cover off.
2. Install new battery into the compartment.
3. Put the cover back.

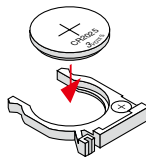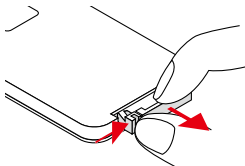

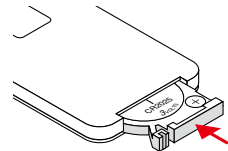

Remove the old battery and install new one (CR2025). Ensure that the side with a "+" is facing up.



To ensure safe operation, please observe the following precautions :


- Use CR2025 type battery.
- Avoid contact with water or liquid.
- Do not expose the remote control to moisture or heat.
- Do not drop the remote control.
- If the battery has leaked in the remote control, carefully wipe the case clean and install new battery.
- Risk of an explosion if battery is replaced by an incorrect type.
- Dispose of used battery according to the instructions.


Name		Description
1	Source	Select an input signal.
2	ReSync	Automatically synchronize the PC analog timing to its optimized condition.
3	HDMI	Switch to HDMI source.
4	Video	Switch to Composite Video or S-Video source.
5	3D	Press the "3D" to turn the 3D OSD menu on/off.
6	Menu	Launch or Exit the on-screen display(OSD).
	Four Directional Select Keys	Press ▲▼◀▶ direction buttons to select items or make adjustments.
8	Freeze	Press to freeze the image. Press it again to un-freeze the image.
9	Blank	Hide the screen picture. Press again to display screen picture.
10	Mute	Mute the volume of speakers and audio out. Press again and switch to normal volume.
11	Power 	Power on/off the projector.
12	PC	Switch to VGA 1/VGA2 source.
13	Keystone 	Adjust image until the sides are vertical.
14	Aspect	Use this function to choose your desired aspect ratio.
15	Volume +/-	Increase / decrease audio volume.

# On-screen Display Menus

The Projector has multilingual On-screen Display menus that allow you to make image adjustments and change a variety of settings. The projector will automatically detect the source.

## How to operate

1. To open the OSD menu, press the “Menu” button on the remote control or on the control panel.
2. When OSD is displayed, use the ◀▶▲▼ buttons to select the desired item and adjust the settings by the ◀▶ buttons.
3. If the setting has  icon, you could press the ▶ button to enter another sub menu. Press the “Menu” button to close the sub menu after adjustment.
4. After adjusting the settings, press the “Menu” button to go back to the main menu.
5. To exit, press the “Menu” button again. The OSD menu will be closed and the projector will automatically save the new settings.

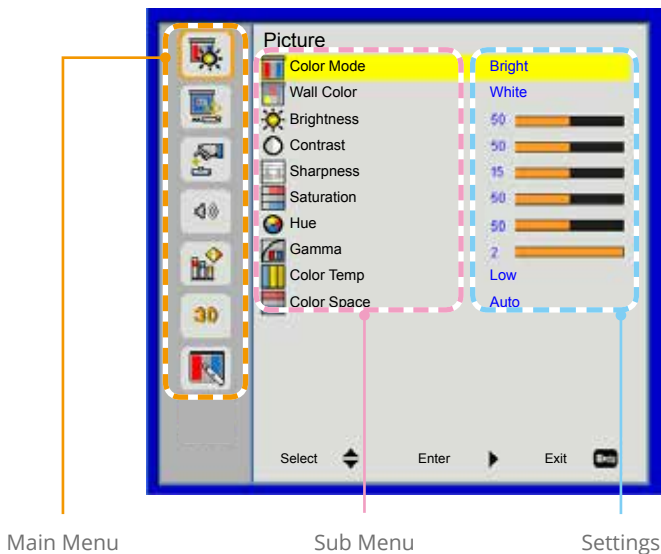

# Structure

Main Menu	Sub Menu	Settings
<b>Picture</b>	Color Mode	Bright / PC / Movie / Game / User
	Wall Color	White / Light Yellow / Light Blue / Pink / Dark Green
	Brightness	0~100
	Contrast	0~100
	Sharpness	0~31
	Saturation	0~100
	Hue	0~100
	Gamma	0~3
	Color Temp	Low / Mid / High
<b>Screen</b>	Color Space	Auto / RGB / YUV
	Aspect Ratio	Auto / 4:3 / 16:9 / 16:10
	Phase	0~31
	Clock	-50~50
	H. Position	-10~10
	V. Position	-10~10
	Digital Zoom	1~10
	V. Keystone	-20~20
	Ceiling Mount	Front / Front Ceiling / Rear / Rear Ceiling
<b>Setting</b>	Language	English / Deutsch / Français / Svenska / Norsk / Dansk / Nederlands / عربي
	Menu Location	    
	Closed Caption	Off / CC1 / CC2 / CC3 / CC4
	VGA Out (Standby)	Off / On
	Auto Screen(12V Out)	Off / On
	Test Pattern	Off / On
	Security	Off / On
	Security	Change Password
	Reset	No / Yes
		000000
<b>Audio</b>	Mute	Off / On
	Volume	0~32
	Microphone Volume	0~32
<b>Options</b>	Logo	Default / User
	Logo Capture	
	Auto Source	Off / On
	Input	HDMI / VGA 1 / VGA 2 / S-Video / Composite
	Auto Power Off (Min)	0~120
	Lamp Settings	Lamp Hours Used (Normal)
		Lamp Hours Used (ECO)
		Lamp Life Reminder
		Lamp Power Mode
		Clear Lamp Hours
	Dynamic Black	Off / On
	High Altitude	Off / On
	Dust Filter Reminder	Filters Remind (Hour)
		Cleaning Up Reminder
	Information	Model Name / SNID / Source / Resolution / Software Version / Color Space / Aspect Ratio

Main Menu	Sub Menu	Settings
<b>3D</b>	3D	Auto / Off / On
	3D Invert	Off / On
	3D Format	Frame Packing / Side-by-Side(Half) / Top and Bottom / Frame Sequential / Field Sequential
	1080p @ 24	96Hz / 144Hz
<b>Interactive</b>	Interactive Settings	Off / IR Camera



## Picture



### Color Mode

There are many factory presets optimized for various types of images. Use the ◀ or ▶ button to select the item.

- ▶ Bright: For brightness optimization.
- ▶ PC: For meeting presentation.
- ▶ Movie: For playing video content.
- ▶ Game: For game content.
- ▶ User: Memorize user's settings.

### Wall Color

Use this function to choose a proper color according to the wall. It will compensate the color deviation due to the wall color to show the correct image tone.

### Brightness

Adjust the brightness of the image.

- ▶ Press the ◀ button to darken image.
- ▶ Press the ▶ button to lighten the image.

### Contrast

The Contrast controls the difference between the lightest and darkest parts of the picture. Adjusting the contrast changes the amount of black and white in the image.

- ▶ Press the ◀ button to decrease the contrast.
- ▶ Press the ▶ button to increase the contrast.

## Sharpness

Adjust the sharpness of the image.

- ▶ Press the ◀ button to decrease the sharpness.
- ▶ Press the ▶ button to increase the sharpness.

## Saturation

Adjust a video image from black and white to fully saturated color.

- ▶ Press the ◀ button to decrease the amount of saturation in the image.
- ▶ Press the ▶ button to increase the amount of saturation in the image.

## Hue

Adjust the color balance of red and green.

- ▶ Press the ◀ button to increase the amount of green in the image.
- ▶ Press the ▶ button to increase the amount of red in the image.



■ "Sharpness", "Saturation" and "Hue" functions are only supported under video mode.

## Gamma

Effects the representation of dark scenery. With greater gamma value, dark scenery will look brighter.

## Color Temp.

Adjust the color temperature. At higher temperature, the screen looks colder; at lower temperature, the screen looks warmer.

## Color Space

Select an appropriate color matrix type from Auto, RGB or YUV.

# Screen



## Aspect Ratio

- ▶ Auto: Keep the image with original width-height ratio and maximize the image to fit native horizontal or vertical pixels.
- ▶ 4:3: The image will be scaled to fit the screen and displayed using a 4:3 ratio.
- ▶ 16:9: The image will be scaled to fit the width of the screen and the height adjusted to display the image using a 16:9 ratio.
- ▶ 16:10: The image will be scaled to fit the width of the screen and the height adjusted to display the image using a 16:10 ratio.

## Phase

Synchronize the signal timing of the display with the graphic card. If the image appears to be unstable or flickers, use this function to correct it.

## Clock

Change the display data frequency to match the frequency of your computer's graphic card. Use this function only if the image appears to flicker vertically.

## H. Position

- ▶ Press the ◀ button to move the image left.
- ▶ Press the ▶ button to move the image right.

## V. Position

- ▶ Press the ◀ button to move the image down.
- ▶ Press the ▶ button to move the image up.



■ "H. Position" and "V. Position" ranges will depend on input source.

## Digital Zoom

Press the ◀ button to reduce the size of an image.

Press the ▶ button to magnify an image on the projection screen.

## V Keystone

Press the ◀ or ▶ button to adjust image distortion vertically. If the image looks trapezoidal, this option can help make the image rectangular.

## Ceiling Mount

- ▶ Front: The image is projected straight on the screen.
- ▶ Front Ceiling: This is the default selection. When selected, the image will turn upside down.
- ▶ Rear: When selected, the image will appear reversed.
- ▶ Rear Ceiling: When selected, the image will appear reversed in upside down position.

## Setting



### Language

Choose the multilingual OSD menu. Press the ◀ or ▶ button into the sub menu and then use the ▲ or ▼ button to select your preferred language. Press ▶ on the remote control to finalize the selection.



### Menu Location

Choose the menu location on the display screen.

### Closed Caption

Use this function to enable close caption menu. Select an appropriate closed captions option: Off, CC1, CC2, CC3, CC4.

### VGA OUT (Standby)

Choose "On" to enable VGA OUT connection.

### Auto Screen (12V Out)

Choose "On", the down/up move of electronic screen will be related with power on/off of Projector.

### Test Pattern

Display a test pattern.

### Security

Refer next page.

### Reset

Choose "Yes" to return the parameters on all menus to the factory default settings.

## Setting | Security



### Security


- ▶ On: Choose “On” to use security verification when turning on the projector.
- ▶ Off: Choose “Off” to be able to switch on the projector without password verification.

### Change Password

- ▶ First time:
  - Press the ► button to set the password.
  - The password has to be 6 digits.
  - Use the ▲ or ▼ on the remote control to select your new password on the screen and then press □ to confirm it.
- ▶ Change Password:
  - Use the ▲ or ▼ on the remote control to enter your current password on the screen and then press ► to confirm it.
  - Enter a new password (6 digits in length) then press “Enter” to confirm it.
  - Enter the new password again and press “Enter” to confirm it.
- ▶ If the incorrect password is entered for 3 times, the projector will automatically shut down.
- ▶ If you have forgotten your password, please contact your local office for support.



- Password default value is "000000" (first time).

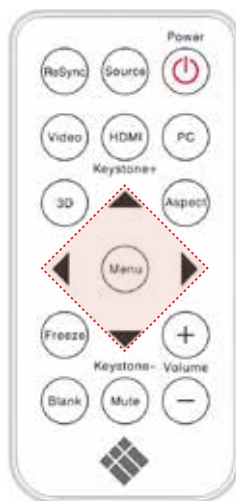



# Volume



## Mute

- ▶ Choose "On" to turn mute on.
- ▶ Choose "Off" to turn mute off.


## Volume

- ▶ Press the ◀ button to decrease the volume.
- ▶ Press the ▶ button to increase the volume.

## Microphone Volume

- ▶ Press the ◀ button to decrease the microphone Volume.
- ▶ Press the ▶ button to increase the microphone Volume.

## Options

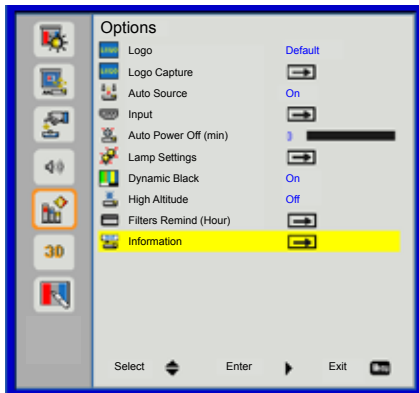


### Logo

Use this function to set the desired startup screen. If changes are made they will take effect the next time the projector is powered on.

- ▶ Default: The default startup screen.
- ▶ User: Use stored picture from “Logo Capture” function.

### Logo Capture

Press ▶ button to capture an image of the picture currently displayed on screen.

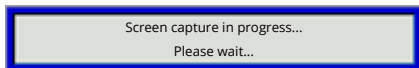


- For successful logo capture, please ensure that the onscreen image does not exceed the projector's native resolution. (WXGA:1280x800).
- “Logo Capture” is not available when 3D is enabled.
- Before active this function, it is recommended that “Aspect Ratio” is set to the “Auto”.

### Auto Source

- ▶ On: The projector will search for other signals if the current input signal is lost.
- ▶ Off: The projector will only search current input connection.

### Input

Press ▶ button to enable/disable input sources. The projector will not search for inputs that are not selected.

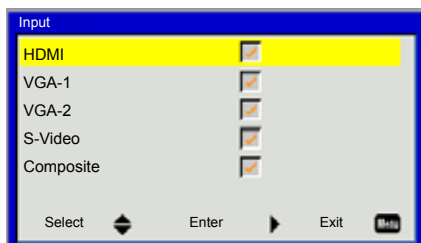

### Auto Power Off (min)

Sets the countdown timer interval. The countdown timer will start, when there is no signal being sent to the projector. The projector will automatically power off when the countdown has finished (in minutes).

### Lamp Setting

Refer to page 34.

### Dynamic Black

- ▶ On: The pictures with the optimum contrast will be displayed by automatically providing signal compensation to suit the pictures concerned.
- ▶ Off: Turn off this function.

#### **Note**

- "Dynamic Black" is available when "Color Mode" is set to "Movie".
- "Dynamic Black" is not available when "3D" or "Interactive" is enabled.
- When "Dynamic Black" is available, "Lamp Power Mode" selection is not available.

### High Altitude

- ▶ On: The built-in fans run at high speed. Select this option when using the projector at altitudes above 2500 feet/762 meters or higher.
- ▶ Off: The built-in fans automatically run at a variable speed according to the internal temperature.


### Filters Remind (Hour)

- ▶ Filters Remind (Hour): Set the filter reminder time
- ▶ Cleaning Up Reminder: Select "Yes" to reset the dust filter hour counter after replacing or cleaning the dust filter.

### Information

Display the projector information for model name, SNID, source, resolution, software version, color space and aspect ratio on the screen.

## Options | Lamp Settings

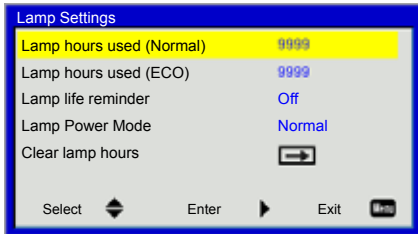

### Lamp Hours Used (Normal)

Display the projection time of normal mode.

### Lamp Hours Used (ECO)

Display the projection time of ECO mode.

### Lamp Life Reminder

- ▶ On: Choose "On" to show the lamp end of life warning message.
- ▶ Off: Choose "Off" to hide the lamp end of life warning message.


### Lamp Power Mode

- ▶ Normal: Normal mode.
- ▶ ECO: Use this function to dim the projector lamp which will lower power consumption and extend the lamp life.

### Clear Lamp Hours

Choose "Yes" to reset the lamp hour counter after replacing the lamp.

## 3D

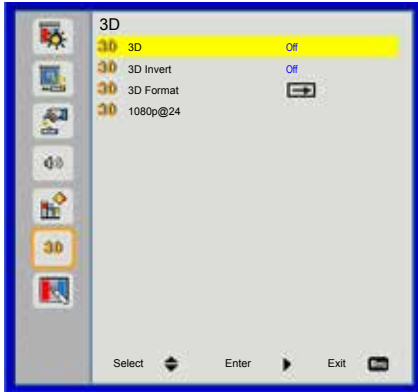

### 3D

- ▶ Auto: When a HDMI1.4a 3D timing identification signal is detected, the 3D image is selected automatically.
- ▶ Choose "Off" to disable 3D function.
- ▶ Choose "On" to enable 3D function.

### 3D Invert

If you see a discrete or overlapping image while wearing DLP 3D glasses, you may need to execute "Invert" to get best match of left/right image sequence to get the correct image.

### 3D Format

Use this feature to select the 3D format. Options are: "Frame Packing", "Side-by-Side (Half)", "Top and Bottom", "Frame Sequential" and "Field Sequential".



- "Frame Sequential" is supported the DLP Link 3D input signals from VGA / HDMI connector.
- "Frame Sequential" / "Field Sequential" are supported the HQFS 3D input signals from Composite/S-video connector connector.
- "Frame Packing" / "Side-by-Side(Half)" / "Top and Bottom" are supported from HDMI 1.4a 3D input signals.

### 1080p @24

Use this feature to select 96 or 144Hz refresh rate as using 3D glasses in the 1080p @ 24 frame packing.

## Interactive (\*)



### Note


- The Interactive function is available when displaying graphic source from HDMI/VGA input. Other sources are not supported.
- If "3D" or "Dynamic Black" function is enabling, "Interactive" feature is disabling.
- Interactive function is only for 2402Wi

## Interactive Settings

Use this feature to select the Interactive Pen function. Options are: "Off" and "IR Camera". Choose "Off" to disable the Interactive Pen function.

You need to unplug the Mini USB cable that connects NB/desktop with the projector before using the Interactive function. After you complete the Interactive Settings in OSD, use Mini USB cable to connect NB/desktop with the projector.

The IR camera Interactive function needs an external IR camera. Please refer to below figure and plug in IR camera to projector before projector was installed.

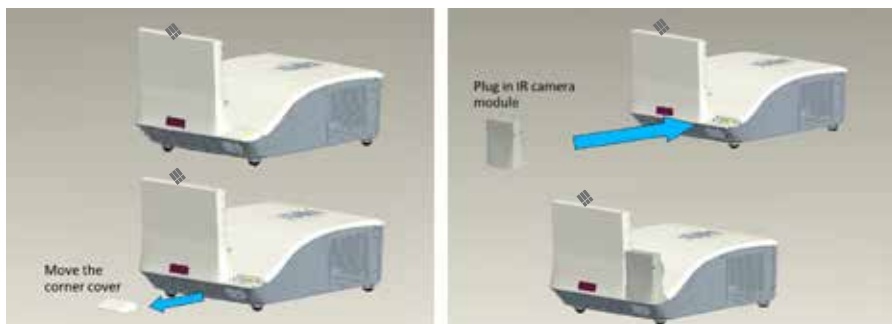

# Appendices

## Troubleshooting

*If you experience a problem with your projector, please refer to the following information. If a problem persists, please contact your local reseller or service center.*

### Image Problems

#### **? No image appears on-screen**

- ▶ Ensure all the cables and power connections are correctly and securely connected as described in the “Installation” section.
- ▶ Ensure the pins of connectors are not crooked or broken.
- ▶ Check if the projection lamp has been securely installed.
- ▶ Ensure that the “Blank” feature is not turned on.

#### **? Partial, scrolling or incorrectly displayed image**

- ▶ Press “Auto Sync” on the remote control.
  - If you are using a PC:
    - For Windows 95, 98, 2000, XP, Windows 7:
      1. Open the “My Computer” icon, the “Control Panel” folder, and then double click on the “Display” icon.
      2. Select the “Settings” tab.
      3. Verify that your display resolution setting is lower than or equal to 1080p.
      4. Click on the “Advanced Properties”.
    - For Windows Vista:
      1. From the “My Computer” icon, open the “Control Panel” folder, and double click the “Appearance and Personalization”
      2. Select “Personalization”.
      3. Click “Adjust screen resolution” to display “Display Settings”. Click on the “Advanced Settings”.

- If the projector is still not projecting the whole image, you will also need to change the monitor display you are using. Refer to the following steps.
  1. Select the "Change" under the "Monitor" tab.
  2. Click on "Show all devices". Next, select "Standard monitor types" under the SP box; choose the resolution mode you need under the "Models" box.
  3. Verify that the resolution setting of the monitor display is lower than or equal to 1080p.
- If you are using a Notebook:
  - First, follow the steps above to adjust resolution of the computer.
  - Press the toggle output settings. example: [Fn]+[F4]

Notebook Brand	Function Keys
Acer	[Fn]+[F5]
Asus	[Fn]+[F8]
Dell	[Fn]+[F8]
Gateway	[Fn]+[F4]
IBM/Lenovo	[Fn]+[F7]
HP/Compaq	[Fn]+[F4]
NEC	[Fn]+[F3]
Toshiba	[Fn]+[F5]
Mac Apple	System Preference -> Display -> Arrangement -> Mirror display

- If you experience difficulty changing resolutions or your monitor freezes, restart all equipment including the projector.

## **? The screen of the Notebook or PowerBook computer is not displaying your presentation**

Some Notebook PCs may deactivate their own screens when a second display device is in use. Each has a different way to be reactivated. Refer to your computer's documentation for detailed information.

## **? Image is unstable or flickering**

- ▶ Adjust the "Phase" to correct it. Refer to the "Screen" section for more information.
- ▶ Change the monitor color setting from your computer.



### **? Image has vertical flickering bar**

- ▶ Use "Clock" to make an adjustment. Refer to the "Screen" section for more information.
- ▶ Check and reconfigure the display mode of your graphic card to make it compatible with the product.

### **? Image is out of focus**

- ▶ Adjust the "Focus Ring" on the projector lens.
- ▶ Make sure the projection screen is within the required distance. Refer to Page 16.

### **? The image is stretched when displaying 16:9 DVD title**

When you play anamorphic DVD or 16:9 DVD, the projector will show the best image in 16: 9 format on projector side.

- ▶ If you play 4:3 format DVD title, please change the format as 4:3 in projector OSD.
- ▶ If the image is still stretched, you will also need to setup the display format as 16:9 (wide) aspect ratio type on your DVD player.

### **? Image is too small or too large**

- ▶ Move the projector closer to or further from the screen.
- ▶ Press "Menu" on the remote control or on the control panel. Go to "Screen" --> "Aspect Ratio" and try the different settings.

### **? Image has slanted sides:**

- ▶ If possible, reposition the projector so that it is centered on the screen and below the bottom of the screen.
- ▶ Use "Screen" --> "V Keystone" from the OSD to make an adjustment.

### **? Image is reversed**

- ▶ Select "Screen" --> "Ceiling Mount" from the OSD and adjust the projection direction.

## Projector Problems

### ? The projector stops responding to all controls

- ▶ If possible, turn off the projector, then unplug the power cord and wait at least 20 seconds before reconnecting power.

### ? Lamp burns out or makes a popping sound

- ▶ When the lamp reaches its end of life, it will burn out and may make a loud popping sound. If this happens, the projector will not turn on until the lamp module has been replaced. To replace the lamp, follow the procedures in the "Replacing the Lamp" section on pages 53.

## Remote Control Problems

### ? If the remote control does not work

- ▶ Check the operating angle of the remote control is within  $\pm 30^\circ$  both horizontally and vertically of one of the IR receivers on the projector.
- ▶ Make sure there are not any obstructions between the remote control and the projector. Move to within 7 m ( $\pm 0^\circ$ ) of the projector.
- ▶ Make sure the batteries are inserted correctly.
- ▶ Replace batteries if they are exhausted.

## Sound Problems

### ? If no sound from the projector

- ▶ If you are playing an external source, make sure you have an audio cable securely connected between the source device and the projector's audio input.
- ▶ Please make sure the external speakers are not connected.
- ▶ Make sure the volume is not set to minimum.
- ▶ Make sure the "Volume --> Mute" function is set to "Off".

## 3D Problems

### ? Blurry double image

- ▶ Select "3D" --> "3D" from OSD and choose "Off" to avoid normal 2D image is blurry double image.

## ? Two images, Side-by-Side(Half) format


- ▶ Select "3D" --> "3D Format" from OSD and choose "Side-by-Side(Half)" for input signal is HDMI 1.4a 3D. 3D Format is only supported on 3D Timing on page 52.

## ? Image does not display in 3D


- ▶ Check if the battery of 3D glasses is drained.
- ▶ Check if the 3D glasses is turned on.
- ▶ Select "3D" --> "3D Format" from OSD and choose "Side-by-Side(Half)" for input signal is HDMI 1.4a 3D. 3D Format is only supported on 3D Timing on page 52.

## On Screen Messages


- Power off confirm

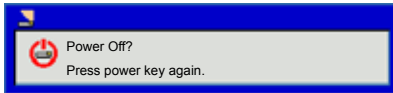


- Fan lock error

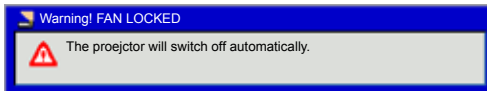


- No source found

 

- Out of display range

 

- Over temperature

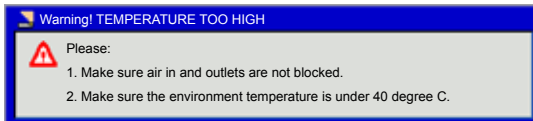

# Compatibility Modes

- VGA Analog
  - PC signal

Modes	Resolution	V. Frequency [Hz]	H. Frequency [Hz]
VGA	640x480	60	31.5
	640x480	67	35.0
	640x480	72	37.9
	640x480	75	37.5
	640x480	85	43.3
	640x480	120	61.9
IBM	720x400	70	31.5
SVGA	800x600	56	35.1
	800x600	60	37.9
	800x600	72	48.1
	800x600	75	46.9
	800x600	85	53.7
	800x600	120	77.4
Apple, MAC II	832x624	75	49.1
XGA	1024x768	60	48.4
	1024x768	70	56.5
	1024x768	75	60.0
	1024x768	85	68.7
	1024x768	120	99.0
Apple, MAC II	1152x870	75	68.7
SXGA	1280x1024	60	64.0
	1280x1024	72	77.0
	1280x1024	75	80.0
QuadVGA	1280x960	60	60.0
	1280x960	75	75.2
SXGA+	1400x1050	60	65.3
UXGA	1600x1200	60	75.0

- Extended wide timing

Modes	Resolution	V. Frequency [Hz]	H. Frequency [Hz]
WXGA	1280x720	60	44.8
	1280x800	60	49.6
	1366x768	60	47.7
	1440x900	60	59.9
WSXGA+	1680x1050	60	65.3

- Component signal

Modes	Resolution	V. Frequency [Hz]	H. Frequency [Hz]
480i	720x480(1440x480)	59.94(29.97)	15.7
576i	720x576(1440x576)	50(25)	15.6
480p	720x480	59.94	31.5
576p	720x576	50	31.3
720p	1280x720	60	45.0
720p	1280x720	50	37.5
1080i	1920x1080	60(30)	33.8
1080i	1920x1080	50(25)	28.1
1080p	1920x1080	23.98/24	27.0
1080p	1920x1080	60	67.5
1080p	1920x1080	50	56.3

I/O connectors	<ul style="list-style-type: none"> <li>• Power socket x 1</li> <li>• RS232 x 1</li> <li>• DC12V x 1</li> <li>• HDMI x 1</li> <li>• VGA input x 2</li> <li>• VGA output x 1</li> <li>• S-Video x 1</li> <li>• Composite x 1</li> <li>• 3.5 mm audio jack input x 2</li> <li>• RCA (L/R) audio jack input x 2</li> <li>• 3.5 mm audio jack input (Microphone)x 1</li> <li>• 3.5 mm audio jack input x 1</li> <li>• Mini USB B x 1</li> </ul>
Standard package contents	<ul style="list-style-type: none"> <li>• AC power cord x 2</li> <li>• VGA cable x 1</li> <li>• Remote control x 1</li> <li>• User's guide (CD) x 1</li> </ul>



■ *Design and specifications are subject to change without prior notice.*

- HDMI Digital
  - PC signal

Modes	Resolution	V. Frequency [Hz]	H. Frequency [Hz]
VGA	640x480	60	31.5
	640x480	67	35.0
	640x480	72	37.9
	640x480	75	37.5
	640x480	85	43.3
	640x480	120	61.9
IBM	720x400	70	31.5
SVGA	800x600	56	35.1
	800x600	60	37.9
	800x600	72	48.1
	800x600	75	46.9
	800x600	85	53.7
	800x600	120	77.4
Apple, MAC II	832x624	75	49.1
XGA	1024x768	60	48.4
	1024x768	70	56.5
	1024x768	75	60.0
	1024x768	85	68.7
	1024x768	120	99.0
Apple, MAC II	1152x870	75	68.7
SXGA	1280x1024	60	64.0
	1280x1024	72	77.0
	1280x1024	75	80.0
QuadVGA	1280x960	60	60.0
	1280x960	75	75.2
SXGA+	1400x1050	60	65.3
UXGA	1600x1200	60	75.0

- Extended wide timing

Modes	Resolution	V. Frequency [Hz]	H. Frequency [Hz]
WXGA	1280x720	60	44.8
	1280x800	60	49.6
	1366x768	60	47.7
	1440x900	60	59.9
WSXGA+	1680x1050	60	65.3

- Video signal

Modes	Resolution	V. Frequency [Hz]	H. Frequency [Hz]
480p	640x480	59.94/60	31.5
480i	720x480(1440x480)	59.94(29.97)	15.7
576i	720x576(1440x576)	50(25)	15.6
480p	720x480	59.94	31.5
576p	720x576	50	31.3
720p	1280x720	60	45.0
720p	1280x720	50	37.5
1080i	1920x1080	60(30)	33.8
1080i	1920x1080	50(25)	28.1
1080p	1920x1080	23.98/24	27.0
1080p	1920x1080	60	67.5
1080p	1920x1080	50	56.3


- HDMI 1.4a mandatory 3D timing- Video Signal

Modes	Resolution	V. Frequency [Hz]	H. Frequency [Hz]
Frame Packing	720p	50	31.5
	720p	59.94/60	15.7
	1080p	23.98/24	15.6
Side-by-Side(Half)	1080i	50	31.5
	1080i	59.94/60	31.3
Top and Bottom	720p	50	45.0
	720p	59.94/60	37.5
	1080p	23.98/24	33.8




# Replacing the lamp

The projector automatically detects the lamp life. When the lamp life is nearing the end of use, you will receive a warning message.

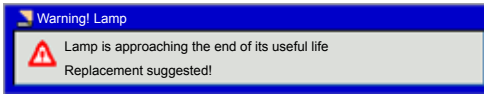

When you see this message, please contact your local reseller or service center to change the lamp as soon as possible. Make sure the projector has been cooled down for at least 60 minutes before changing the lamp.

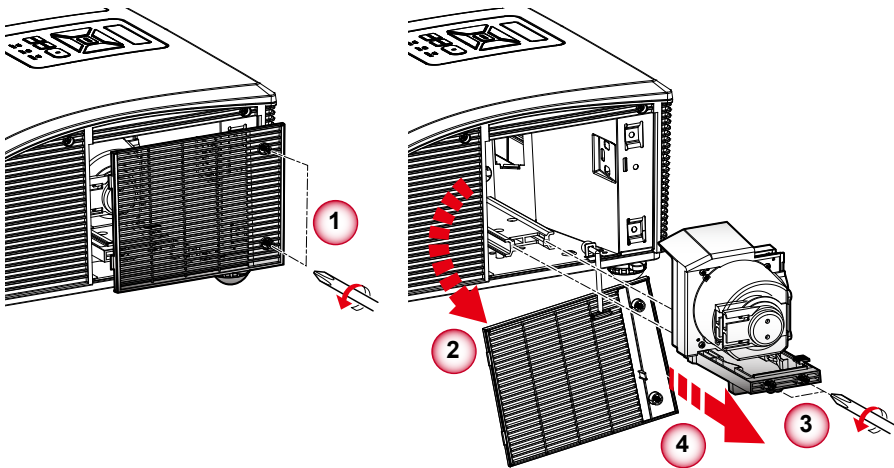

## Note

- The screws on the lamp cover and the lamp cannot be removed.
- The projector cannot be turned on if the lamp cover has not been placed back on the projector.
- Do not touch the glass area of the lamp. Hand oil can cause the lamp to shatter. Use a dry cloth to clean the lamp module if it was accidentally touched.

## Lamp Replacement Procedure:

 
1. Switch off the projector power by pressing the "⏻" button.
2. Allow the projector to cool down for at least 60 minutes.
3. Disconnect the power cord.
4. Unscrew the two screws on the cover. ①
5. Lift up and remove the cover. ②
6. Unscrew the two screws on the lamp module. ③
7. Pull up the lamp handle and remove the lamp module slowly and carefully. ④

To replace the lamp module, reverse the previous steps.


8. Turn on the projector and use "Lamp Reset" after the lamp module is replaced.

# Replacing and cleaning the optional dust filter

We recommend cleaning the dust filter every month, clean it more often if the projector is used in a dusty environment.



When you see this message, please find following steps for cleaning procedure:

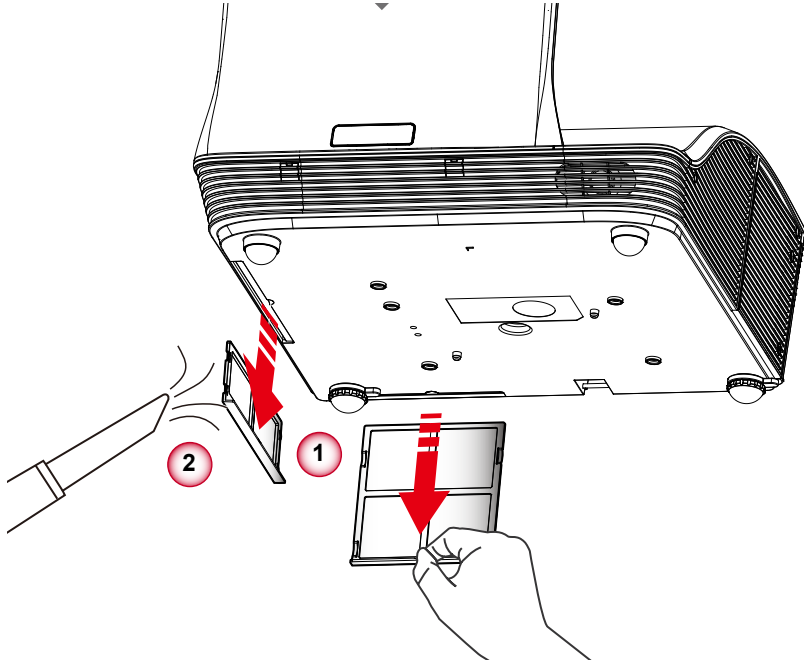

- The optional dust filter should be used in dusty environments.
- If the dust filter is installed, proper maintenance will prevent overheating and related damage to the projector.

## Cleaning the Dust Filter Procedure:

1. Switch off the projector power by pressing the "⏻" button.
2. Disconnect the power cord.
3. Pull the latch by the arrow direction. ①
4. Remove the dust filter slowly and carefully.
5. Clean or replace the dust filter. ②

To install the dust filter, reverse the previous steps.

6. Turn on the projector and use "Reset Dust Filter" after the dust filter is replaced.


# Ceiling Mount Installation

If you wish to use a third party ceiling mount kit, please ensure the screws which are used to attach a mount to the projector meet the following specifications:

- Screw type: M4x4
  - Diameter: 4 mm
  - Length: 11 mm



■ Please note that damage resulting from incorrect installation will invalidate the warranty.

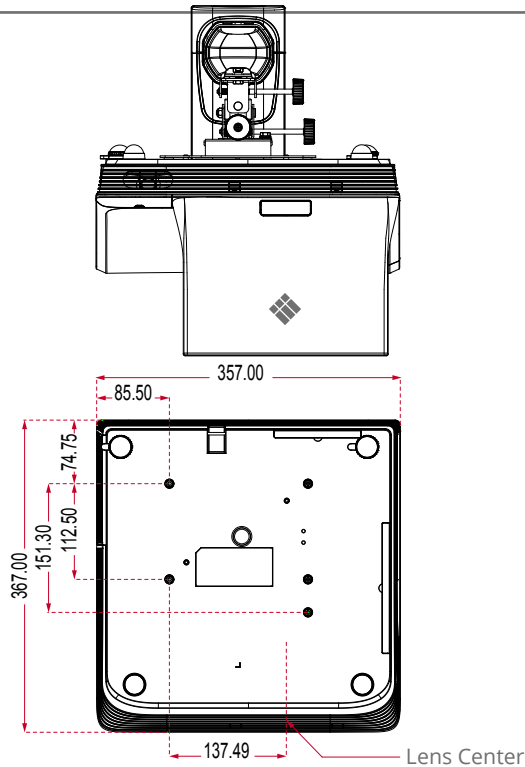

Unit: mm

# Specifications

Projection system	DLP®
Resolution	WXGA (1280x800)
Computer compatibility	IBM PC and compatibles, Apple Macintosh, iMac and VESA standards: SXGA, XGA, SVGA, VGA, WXGA, UXGA
Video compatibility	NTSC (3.58/4.43), PAL (B/D/G/H/I/M/N), SECAM (B/D/G/ K/ K1/L), HDTV (720p, 1080i, 1080p), SDTV (480i, 480p, 576i, 576p)
Aspect ratio	Auto, 4:3, 16:9, 16:10
Displayable colors	1.07 billion colors
Projection lens	F# 2.6
Projection screen size	80.2" - 96.6" (Diagonal)
Max. focus screen size	70" - 100" (Diagonal)
Projection distance	517 mm - 759 mm (±10mm)
Throw ratio	0.35
Horizontal scan rate	30 k - 100 kHz
Vertical refresh scan rate	50 - 120 Hz
Keystone correction	±15 degrees
Weight	8 Kg (17.64 lbs)
Dimensions (W x D x H)	357 (W) x 367 (D) x 135(H) mm (excluding foot) 357 (W) x 367 (D) x 231(H) mm (including reflection mirror)
Power supply	AC 100 - 240 V, 50 - 60 Hz
Power consumption	<ul style="list-style-type: none"> <li>• Normal mode: 350W ±10% @ 110Vac (Bright mode @ full power)</li> <li>• ECO mode: 290W ±10% @ 110Vac (Video mode @ eco power)</li> <li>• Standby &lt; 0.5 W</li> </ul>
Operating temperature	5°C to 40°C / 41°F to 104°F

**AUTHORISED DISTRIBUTOR**



**WWW.I3-TECHNOLOGIES.COM**  
**INFO@I3-TECHNOLOGIES.COM**